



CANOPY TENTS

ONE CHOICE - 10 FT. CLASSIC DYE-SUB ALUMINUM CANOPY
PRODUCT CODE: OC-CAS-CST10

INSTRUCTIONS

1 Take your frame and slightly expand it to expose the corner bars.




2 Take your canopy graphic and place it on top of the frame.



3 Adhere each corner of the canopy to each corner of the frame. Inside each corner of the canopy, there is a strip of Hook and Loop sewn to it.




4 With the canopy securely in position, expand the frame until the corner latches lock into place.

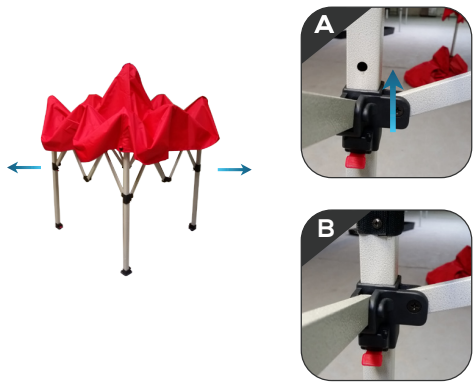

5 Increase the height by extending the lower legs.



6 Pull each leg down until the latch locks into place.

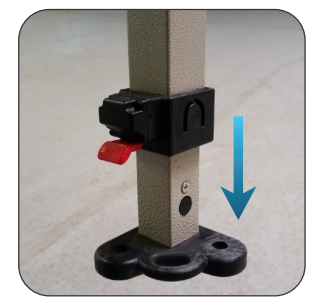

7 Locate the spindle under the canopy, in the middle of the frame. Pull the lever out and rotate to extend the upper peak pole.



8 The dome cap will push out the canopy, creating tension to flush out any loose areas.



9 The install is complete.

